

取扱説明書 Instruction Manual




日本語

お買いあげ誠にありがとうございます。正しくご使用していただくため、この取扱説明書を必ずお読みください。また、お読みになりましたら、大切に保管してください。

特長

- ハンドルをバンド部分に収納できるコンパクトな設計で持ち運びに 便利です。
- ◆セラミック製の臼を使用していますので金属臭がなく、錆びません。 切れ味が良く、磨耗しにくい特性を持っています。
- ●臼部分は水洗いすることができます。
- ◆粉受けボールには挽いた粉の量が一目でわかる目安目盛り付き。



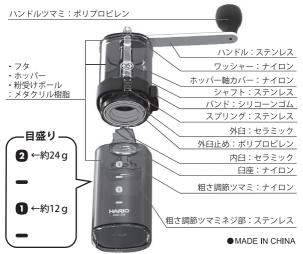

ご使用方法

- 少量のコーヒー豆を入れて挽きながらコーヒー粉の粗さを調節してください。次項の「コーヒー粉の粗さ調節方法」をご参照ください。
 コーヒー1杯分(120mL)のコーヒー豆は約10~12gです。1~2杯分の
- コーヒー豆をホッパーに入れ、フタ、ハンドルを取り付けてください。 3.本体を手でしっかりおさえ、ハンドルを時計回りにゆっくり回すとコー ヒー豆が挽けます。
- ※ハンドルを反時計回りに回すと、挽き臼を傷めますので絶対にしないでください。

コーヒー粉の粗さ調節方法

ハンドルと本体をしっかり押さえ、粗さ調節ツマミを回してください。 調節つまみを回す際には、必ずハンドルを取り付けてください。



時計回りに回すと細かく、反時計回りに回すと 粗く調節できます。



■ 粗さ調節ツマミには表裏があり ます。中心にある8つの凸を臼側 に向けて取り付けてください。

コーヒーを淹れる器具に適した挽き方

挽き方	細挽き	中細挽き	中挽き	粗挽き
粒度(目安)抽出器具	(グラニュー施程度)	(グラニュー糖・ ザラメの中間)	(グラニュー糖・ ザラメの中間)	(ザラメ程度)
V60 ドリッパー	•	•	•	
ペーパーレスドリッパー			•	•
ネルドリップ		•	•	
サイフォン		•	•	
ウォータードリッパー	•	•		
コーヒーメーカー		•	•	•
プレス式			•	•

器具によってはコーヒー豆の挽き方が異なる場合がありますので、ご使用 になる器具の説明書の取扱いに従ってください。

※コーヒー豆はいつも新鮮なものをご用意ください。

お取り扱い上の注意

- ⚠ ハンドルは必ず時計回りに回してください。逆回転や空回し は挽き臼を傷めますので絶対にしないでください。
- ★ お子様に使用させないでください。また、幼児のそばで使用したり、幼児の手の届く所に置かないでください。
- ★製品は食器洗い乾燥機や「家庭用漂白剤」ので使用はできません。使用しないでください。
- ↑ お手入れの際は油を差さないでください。
- ◆ご使用前には洗浄をしてください。
- ◆粗さ調節ツマミを時計回りに回しすぎると、臼同士が接触して臼を傷め、故障の原因になることがあります。
- ◆回転が重い状態で無理に挽くと部品を傷めてしまいますのでおやめく ださい。
- ◆ホッパー内の段差や、すき間に小さく割れた豆等が入り込み、コーヒー豆がスムーズに落ちずハンドルが空回りすることがあります。使用中、時々本体を軽くたたきながらコーヒー豆を挽いてください。
- ◆長期間のご使用により、臼が磨耗して切れ味が落ちる場合があります。 挽けるコーヒー豆の量が著しく少なくなった時が製品のお取り替えの 日安です。
- ◆破損の原因となりますので、コーヒー豆以外にはご使用にならないでください。
- くたさい。
 ◆危険ですのでハンドルを回す際は臼の隙間に指を入れないでください。
- ◆セラミック製の臼を硬いものにぶつけたり、本体を落としたりすると、 臼が破損する原因となりますのでご注意ください。
- ◆硬いもの、尖ったもの等でホッパーや粉受けボールを叩いたり擦ったりしないでください。キズの原因となります。

お手入れの方法

臼の部分は分解してお手入れすることができます。分解する際、部品 をなくさない様にご注意ください。

臼の分解方法

- ①粗さ調節ツマミを反時計回りに回して取り外します。
- ※粗さ調節ツマミを回す際には、必ずハンドルを取り付けて回してください。 【外臼止めの外し方】
- ②内臼、臼座を取り外します。外臼止めを外すと、 外臼が取り外せます。外臼止めが取り外しにく い時は、図のようにマイナスドライバー等で該 当箇所を外側から水平に押すと外せます。
- ③臼にはコーヒー豆の油分が付着します。薄めた中性洗剤に浸け置きにし、十分にすすぎ洗いしてください。洗浄後は、完全に乾燥させてからで使用ください。




ENGLISH

Thank you for purchasing this HARIO product. Please be sure to read this instruction manual thoroughly in order to use this product correctly. After reading it, store it in a safe place for future reference.

Features

- The compact design enables the handle to be stored within the band part for convenient transport.
- Ceramic burr does not have a metallic odor, and will never rust.
 Sharp, durable blades.
- •The burr section can be disassembled for washing.
- •The graduations on the ground coffee bottle allow you to check the amount you have ground at a glance.

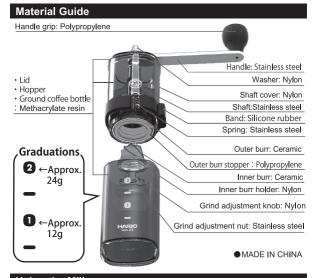

Using the Mill

- Put in a small amount of coffee beans then adjust the coarseness of the grind as you grind them. See the next section, "Adjusting the Size of the Coffee Grounds", for more information.
- 2 A single cup of coffee (120mL) requires about 10 to 12g of coffee beans. Put1 or 2 cups worth of coffee beans into the hopper, put on the lid and attach the handle.
- 3. Hold the grinder firmly and rotate the handle clockwise to grind the coffee beans.
 - We wer turn the handle counterclockwise (left), as doing so will damage the burr.

Adjusting the Size of Coffee Grounds

Firmly hold onto the handle and main unit as you turn the grind adjustment knob. Make sure that the handle is attached before turning the adjustment knob.



Rotate to the right (clockwise) for a finer grounds or to the left (counterclockwise) for a coarser grounds.



The grind adjustment knob must be attached in the correct orientation. Attach the side with the 8 dimples around the center facing the burr side.

Choosing the Correct Coarseness

Coarseness	Fine	Medium-Fine	Medium	Coarse
Granule size (approx.) Brewing equipment	(Granulated sugar size)	(Between granulated and crystalized sugar)	(Between granulated and crystallized sugar)	(Crystal l ized sugar size)
Paper filter	•	•	•	
Paperless filter			•	•
Cloth filter		•	•	
Syphon		•	•	
Water dripper	•	•		
Coffee maker		•	•	•
French press			•	•

The recommended coarseness may differ depending on the type of equipment used. See the instruction manual of your coffee-making equipment for more details.

^{*} Always use fresh coffee beans.

Precautions for Use

- Always turn the handle clockwise, Never spin the handle or turn it counterclockwise, as doing so will damage the burr.
- ⚠ Do not allow children to use this product, Do not use near children, and store out of reach of children.
- Do not wash in a dishwasher, or wash using household bleach.
- Do not apply oil for maintenance.
- · Wash the product before using for the first time.
- Turning the grind adjustment nut too far in the clockwise direction causes the ceramic burrs to grind together, which may result in a malfunction.
- Do not force the handle around if it is difficult to move, as doing so may damage various parts of the product.
- Small coffee bean fragments may get into the hopper ridges or gaps, preventing coffee beans from dropping smoothly resulting in the handle spinning freely. Gently tap the coffee mill occasionally during use.
- The burrs may become blunt due to prolonged use. Replace the coffee mill when the amount of coffee beans that can be ground reduces significantly.
- Do not use to grind anything other than coffee beans. Doing so may damage the product.
- Do not insert your fingers into the coffee grinder while rotating the handle.
- Do not allow the ceramic burr to be hit by hard material, or allow the product to be dropped. Doing so may cause the burr to chip or crack.
- Do not use hard or pointed objects to strike or scratch the hopprn and bottle.

Product Care

The burr section can be disassembled for washing. Be careful not to lose any parts when disassembling.

Disassembling the Burr

- 1. Turn the grind adjustment knob counterclockwise to remove it.
 - * Make sure that the handle is attached when turning the grind adjustment knob.
- Remove the inner burr and the inner burr holder. The outer burr can be removed after removing the outer burr stopper. If the outer burr stopper is difficult to remove, use a tool such as a flathead screwdriver to press it <a href="https://linear.com/horses
- The burr may be coated in coffee oil. Soak the burr in diluted neutral detergent and then thoroughly rinse. Allow it to dry completely after washing.

【Removing the outer burr stopper】



Flathead screwdriver

製品についてのお問い合わせ先

HARIO株式会社

〒103-0006東京都中央区日本橋富沢町9-3 フリーダイヤル:0120-39-8208 https://www.hario.com

HARIO CO., LTD.

9-3 Nihonbashi Tomizawa-Cho, Chuo-ku,Tokyo 103-0006 Japan https://global.hario.com



HOW TO USE

MSG-2 共通説明書 2301